


OZONE GENERATOR PLATE PACK REPLACEMENT INSTALLATION & SAFETY

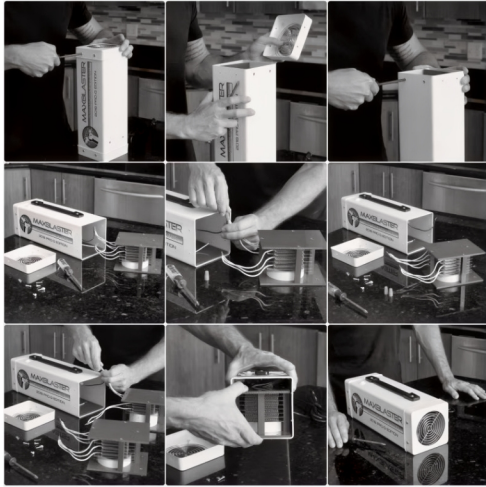

PAY ATTENTION TO THIS

When replacing the plate pack in your ozone generator pay attention to the **condition of the wire nuts** and the level of **grime & residue** inside the device.

The **wire nuts** get **very hot** during use and should **not be allowed to come in contact** with high levels of **grime & residue**. Use new/clean wire nuts with each replacement and position them wisely away from other wires & components.

WWW.MAXOZONEUSA.COM/SERVICE

EMAIL: BOB.SOHA@MAXOZONEUSA.COM

VIDEO DEMONSTRATION AVAILABLE

FULL SERVICE OPTIONS AVAILABLE

CAUTION: WHAT TO AVOID

Avoid **hot wire nuts** contacting other wires or **high levels of grime & residue** inside the device. Melting can occur under a combination of factors. The components & device are not flammable. But position the machine wisely and **avoid flammable items** from contacting the device during use.

